


# Checking product references and flow rates for ventilation reporting

L2003070 26.10.2022

## Flow rate control DucoBox Silent (Connect) / DucoBox Focus:

- 1** Open the DucoBox cover. Behind the cover is the CE sticker for checking the product references.

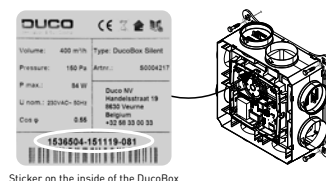


Sticker on the inside of the DucoBox

In the case of DucoBox Focus: the control valves are located behind the cover. These can be recognised by the following icons:


**2**

Reference:	0000-4163	0000-4164	0000-4208	0000-4162	0000-4644	0000-4165
Label:						
Flow rate*:	75m³/h	30m³/h	25m³/h	50m³/h	50m³/h	25m³/h
Sensor:	CO <sub>2</sub>	CO <sub>2</sub>	CO <sub>2</sub>	Humidity	Humidity + CO <sub>2</sub>	-
Application:	Kitchen	Bedroom	Toilet	Bathroom Laundry room Other wet room	Bathroom + toilet	Various applications

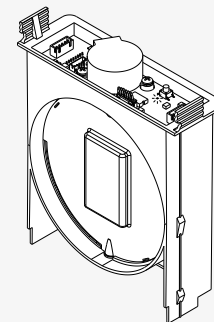


\* The flow rate can be adjusted via the display on the DucoBox.

- 3** Start the flow rate control by briefly pressing the "high" button on the PCB. The LED indication next to the 'high' button now lights up green. This activates the high mode for 30 minutes. The PCB is electrically protected and thus accessible for this function.

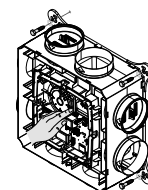


- 4** Close the lid of the DucoBox properly and wait about 10 seconds.

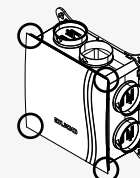



- 5** The flow rates can be controlled. If the function is deactivated after 30 minutes within the control period, repeat the activation from point 3.

- 6** After checking the flow rates, it is not necessary to deactivate the high level setting; this is done automatically, as described above.
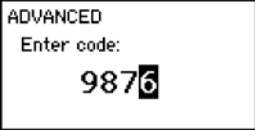
## Flow rate control DucoBox Energy / DucoBox Eco:

<b>1</b>	The CE label to verify the product references is located on top of the unit.
<b>2</b>	To control the flow rates, the high mode can be activated by scrolling (using arrow keys) to the "advanced" mode via the display.
<b>3</b>	The code to activate the advanced mode is '9876'.
	
<b>4</b>	Under the advanced mode, select the setting 'Adjustment' and then 'verify high level'.
<b>5</b>	The high mode is activated for 30 minutes. If the function is deactivated after 30 minutes within the control period, repeat the activation from point 2.
<b>6</b>	After checking the flow rates, it is not necessary to deactivate the high level setting; this is done automatically, as described above.

## Recognition of Duco room sensors and controls (without having to dismantle them):

<b>1</b>	Activate the "Installer mode" by pressing 2 diagonal buttons of the controller or sensor for 5 seconds. The LED indication of the controls will flash green.	
<b>2</b>	Deactivate the installer mode by pressing the 4 push buttons with the palm of your hand.	
<b>3</b>	<p>The LEDs on the controller/sensor light up for a few seconds in a specific colour:</p> <ul style="list-style-type: none"> <li>a. White = operation without sensor</li> <li>b. Blue = operation with RH sensor</li> <li>c. Purple = operation with CO<sub>2</sub> sensor</li> </ul>	